


Guide d'installation - Passage Installation Guide - Passage


1. Door Prep

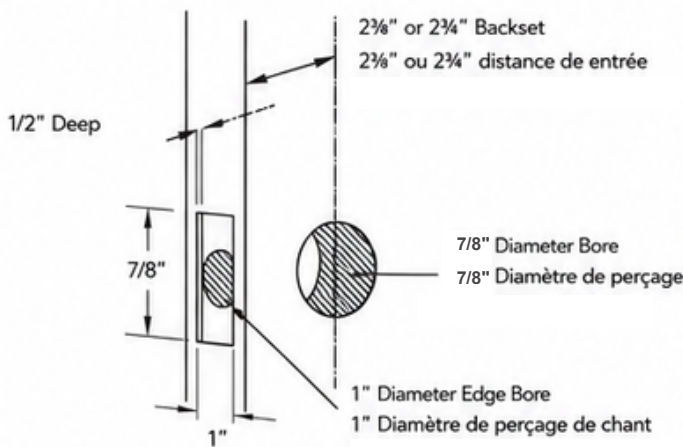

2. Standard Strike Plate Door Jamb Prep

Prep pour jambage de porte à gâche standard

Door Thickness (A)
Épaisseur de la porte (A)

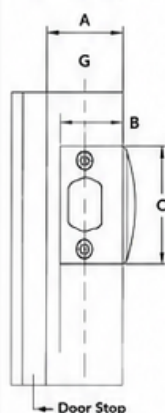

A	B	C
1 3/8"	1 1/4"	2 1/4"
1 1/2"	1 3/8"	2 1/4"
1 3/4"	1 7/8"	2 1/4"

NOTE: Dimensions B & C should be used as reference only. Due to tolerances actual door jamb prep dimensions will vary. Using the strike plate outline edges and locate screw holes on strike with center line on jamb.


REMARQUE : Les dimensions B et C n'ont qu'une valeur indicative. Compte tenu des tolérances, les dimensions de la porte de jambage de porte réelles peuvent varier. Définissez les contours à l'aide de la gâche et localisez les trous de vis avec la ligne centrale de la gâche sur le jambage.

3. Install Strike Plate


Fasten Strike Plate with #8 wood screws (provided).

Fixer la gâche à l'aide des vis à bois #8 (fournies).

Fasten Strike Plate with #8 wood screws (provided).

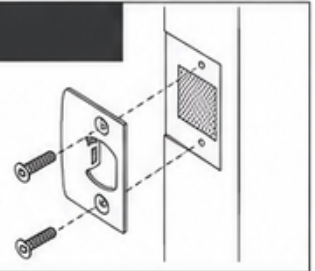

4. Place Plastic Alignment Tool in Bore Hole & Install Latch

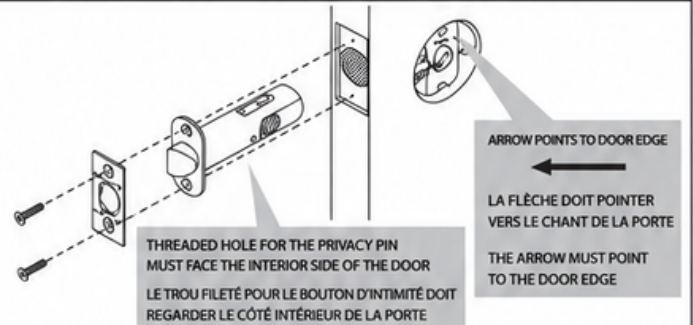

5. Install Outside and Inside Trims

1 Position the outside trim through the bore hole.
Placez la garniture extérieure dans le trou.

Position the outside trim through the bore hole.

For emergency, insert Emergency Release tool into the release hole of the exterior rosette to open the lock.

En cas d'urgence, insérez l'Outil de déverrouillage d'urgence dans le trou de déverrouillage de la rosette extérieure pour ouvrir la serrure.

